

# VX 800 INSTRUCTION

## MODELS:

<b>VX800-2</b>	Module 2 Relay
<b>VX800-2L</b>	Module 2 Relay plus panel illumination
<b>VX800/F</b>	Stand alone unit 2 Relay. Flush mounting
<b>VX800/S</b>	Stand alone unit 2 relay. Surface mounting
<b>VX800-3</b>	3 Relay
<b>VX800-3L</b>	3 Relay plus panel illumination

## INSTALLATION -2 RELAY SYSTEM-

- 1 - Power up 12 Volts Ac or Dc.
- 2 - Tap in pre-factory code 6x1 (111111) and press ENTER.  
PROG. led will illuminate.
- 3 - Tap in 3 to 6 digit master code and press ENTER.
- 4 - Tap in 3 to 6 digit 1st relay code and press ENTER.
- 5 - Tap in 2 digit relay operation time (1 to 99 sec)and press ENTER.  
I.E: 01=1sec ... 99=99 sec, 00=Remain open operation.
- 6 - Tap in 3 to 6 digit 2nd relay code and press ENTER.
- 7 - Tap in 2 digit relay operation time (as instruction 5).
- 8 - Press ENTER twice. PROG. led will go out.

System is now ready to use.

If an entry or exit button is required (on 2 relay model only) connect button terminals 9-10. When push button is pressed relay No.1 will operate for its programmed time. If this function is only required at certain times connect a time clock in series with one leg of push button.

## NOTES:

- If only one relay is required press ENTER twice after instruction number 5.
- For 3 RELAY SYSTEM repeat 6 and 7.
- To cancel any code while operating tap in relevant code and press CLEAR button.
- To change codes enter master code and proceed from instruction number 3.
- All relays can have same code if required.
- Any number of relays can be operated at same time if required.
- If a wrong code is entered the system will lock out for 5 seconds which will increase each time a wrong code is entered.

The system will operate once the correct code is entered.

## INSTRUCTION TO RETURN SYSTEM TO PRESET MASTER FACTORY CODE

- 1 - Turn off power to code lock.
- 2 - Keep ENTER button depressed on code lock.
- 3 - Turn back on power to code lock making sure ENTER button is depressed all the time.
- 4 - Release ENTER button.
- 5 - Code lock is now set at factory master code 6 X 1 (111111).
- 6 - Proceed with programming for a new system.

## TECHNICAL INFORMATION


- Power requirements:12-14 Vac or dc.Min 15 mA at 12 Vdc without lamp and relays in rest position.  
Max 315 mA at 14 Vac with lamp illumination and 3 relays activated.
- 1st and 2nd relay have NO/NC contacts.  
3rd relay NO contact only.
- Max of contacts 5A 24Vac or DC.

If help is required for installing or operating this unit please contact our technical department on +39 734 631669 (all countries) or 091 224 3174(UK).

# VX 800 SERIES

## TO SET UP SYSTEM

## TO ENTER NEW RELAY CODE

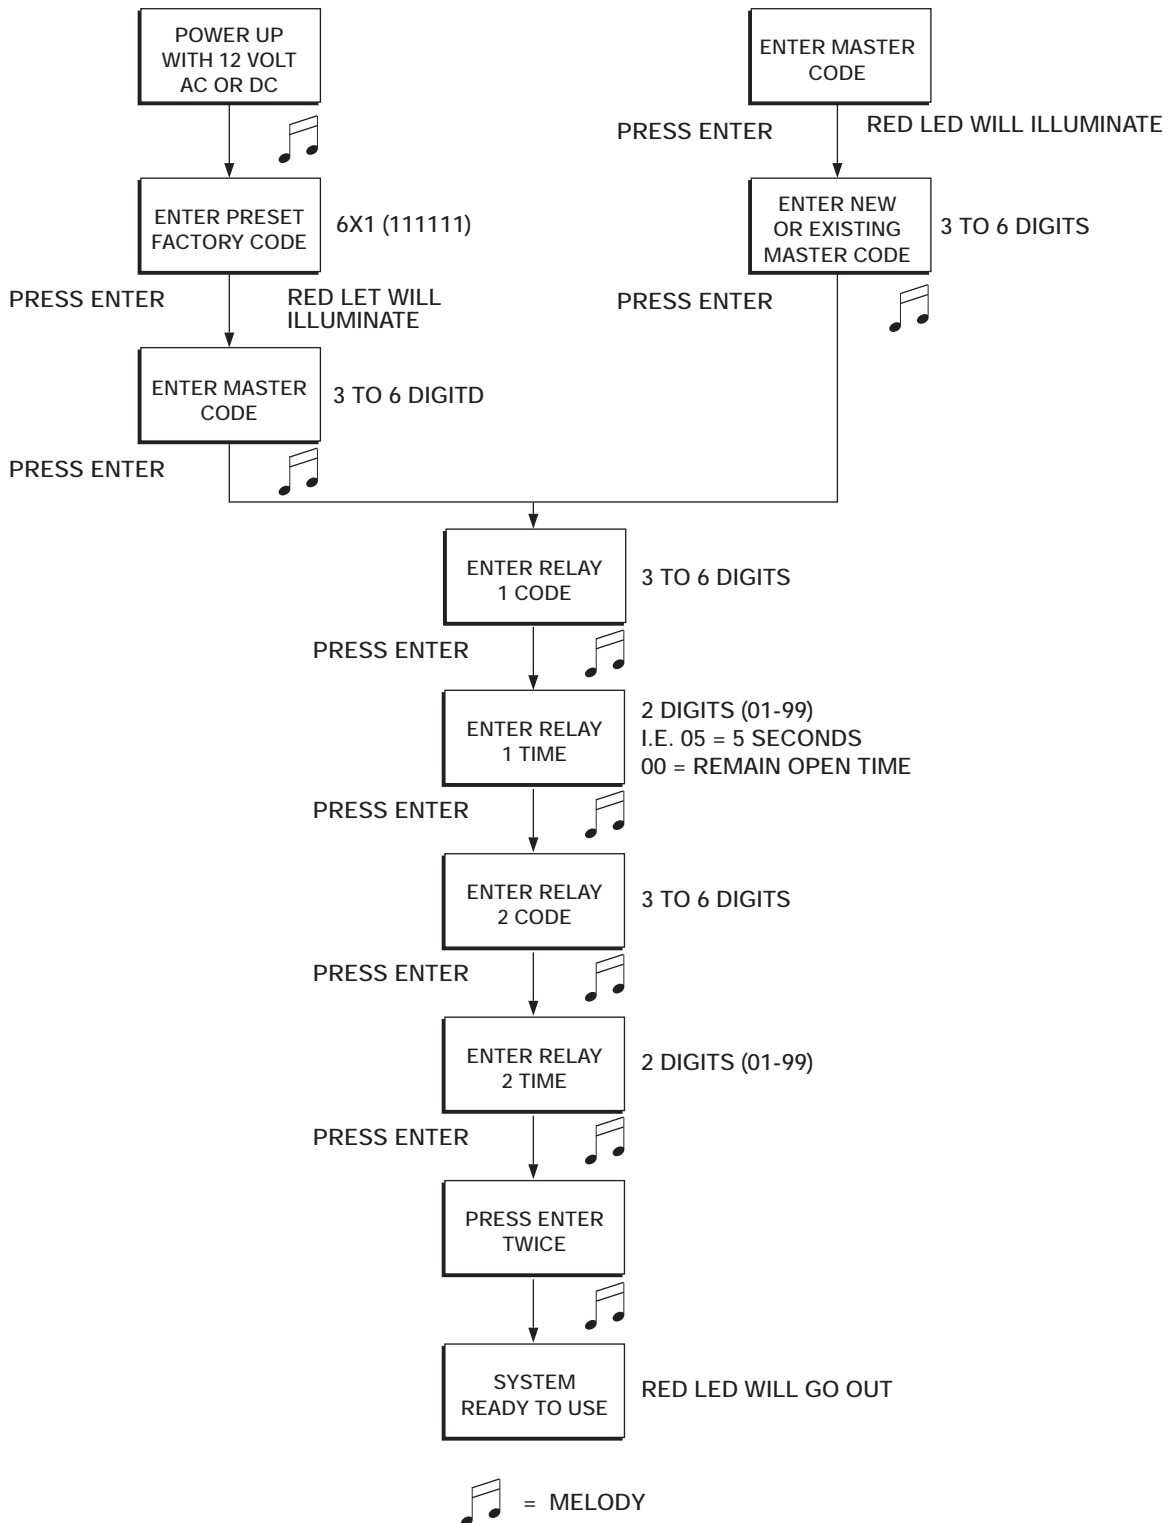

NOTE: TO EXIT BEFORE THE END FROM PROGRAM MODE, PRESS ENTER TWICE (RED LED WILL GO OUT).

TO USE SYSTEM, ENTER CODE AND PRESS "ENTER"; RELAY WILL OPERATE FOR PROGRAMMED TIME.

IF YOU WANT TO CANCEL, REMAIN OPEN TIME, ENTER CODE AND PRESS "CLEAR".

IF YOU WANT TO OPERATE RELAYS TOGETHER, YOU MUST PROGRAM SAME CODE FOR EVERY RELAY.